




**RMC MEDICAL**

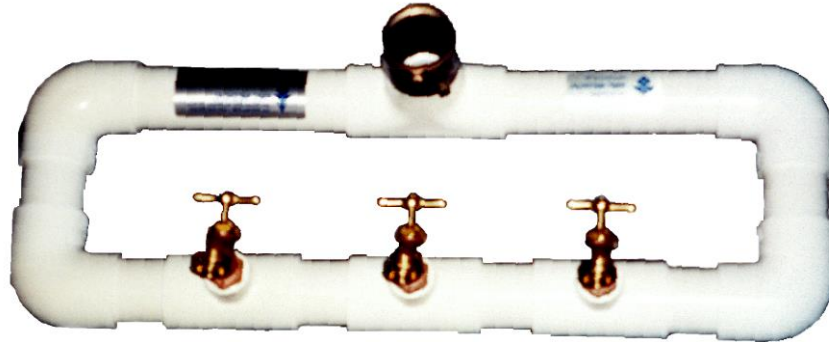

## **DECON MANIFOLD SYSTEM HDS-6016**

The Decon Manifold System is a device that reduces the flow of water from a 1 1/2" Fire Hose to a series of three 3/4" spigots. Garden hoses can be attached directly to the manifold and run to a Decon Shower or used separately.

Follow these easy steps to assure maximum effectiveness:

1. Connect fire hose supply line to 1 1/2" National Hose female swivel adapter.
2. Connect garden hose to 3/4" brass spigot.
3. Run garden hose to Decon Shower, other decontamination equipment, or use hose separately.
4. Open up at least one brass spigot **PRIOR** to pressurizing manifold.
5. Pressurize the fire hose and connecting manifold.

**CAUTION: MAXIMUM WATER PRESSURE TO MANIFOLD 60-80 psi**

6. Once the system is pressurized, close any unnecessary spigots.
7. After use, turn off the source of water pressure to the manifold.
8. Once pressure is released, turn off spigots.

**HazMat Emergency Response Equipment \* Decontamination Equipment  
EMS Equipment and Supplies \* Training Videos \* Training Seminars**

---

**RMC Medical – 6940-C State Rd. – Philadelphia, PA 19135  
Tel: (215) 824-4100 \* Fax: (215) 824-1371 \* Email: [rmcmcd@verizon.net](mailto:rmcmcd@verizon.net)**